 


Read all instructions before use

D-Nail Universal Heater

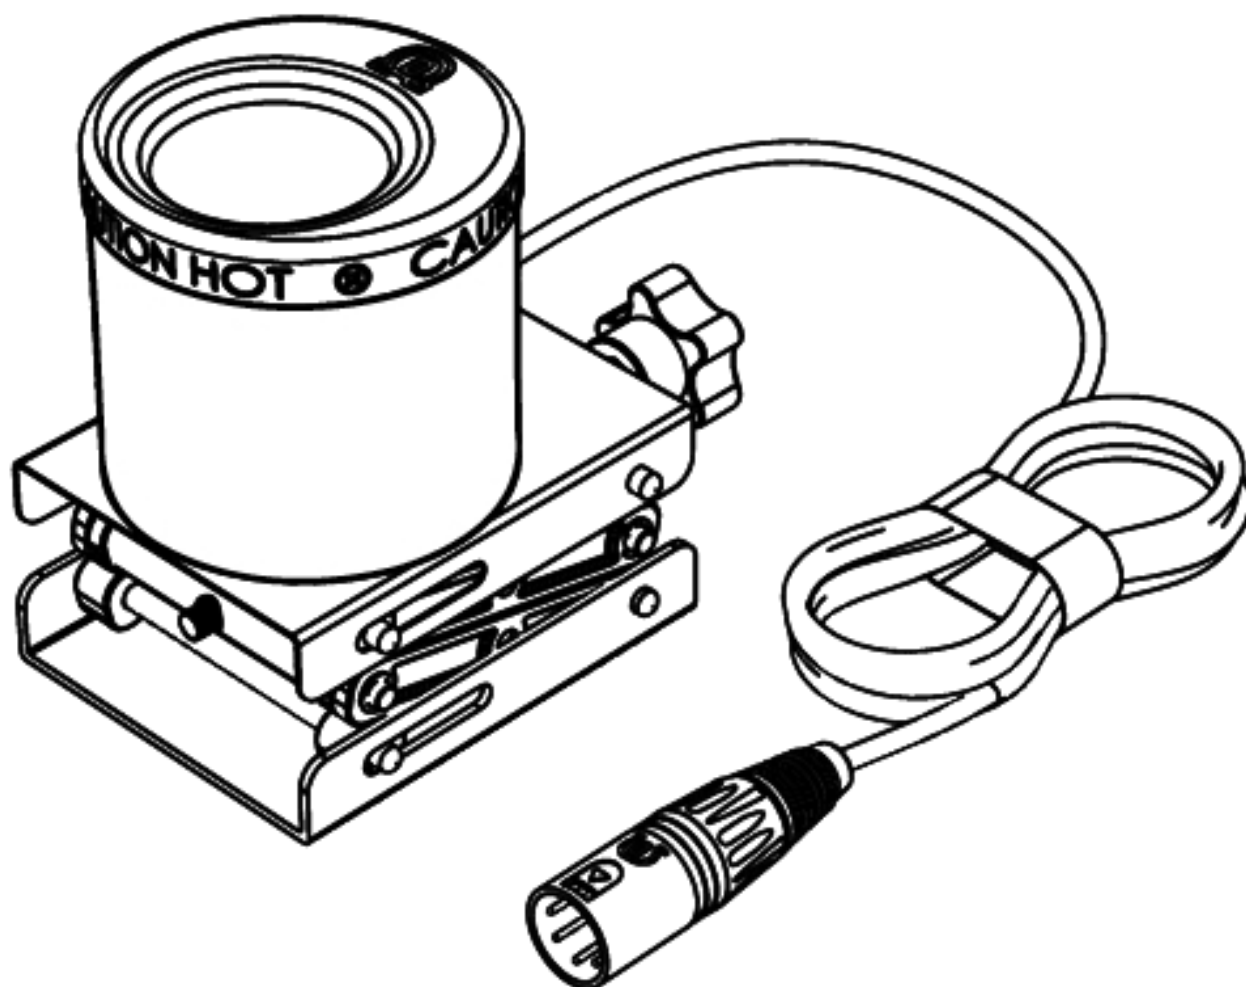


Warranty:

Three year warranty against failure from defect.
1 year prorated warranty for the heating element.
*Heating element lifespan will vary with usage,
replacement service is available.*

Shop at D-Nail.com

Contact: info@d-nail.com


System Parts:

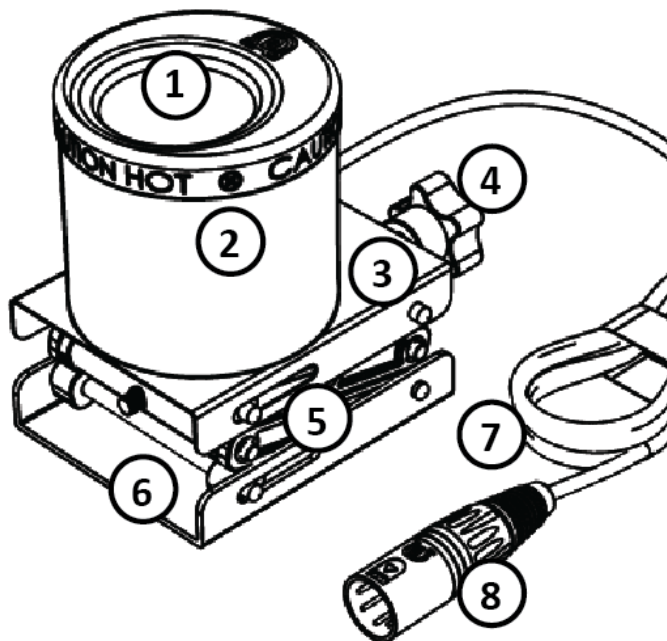

1. Inner Crucible
2. Heat Shield
3. Top Plate
4. Height Knob
5. Scissor-Lift
6. Base Plate
7. Heater Cord
8. XLR Plug
9. D-Nail Controller*

Any D-Nail brand Controller with an XLR input is compatible. Performance is not guaranteed with other brands of controller. **Using an incompatible controller may cause damage to all parts. Many are compatible, please confirm wiring with other brand manufacturers:*

“ Pin Configuration and amperage: L1, N2, TC+ 3, TC- 4, G5 & minimum 3 amp rating (ideally 4+) ”

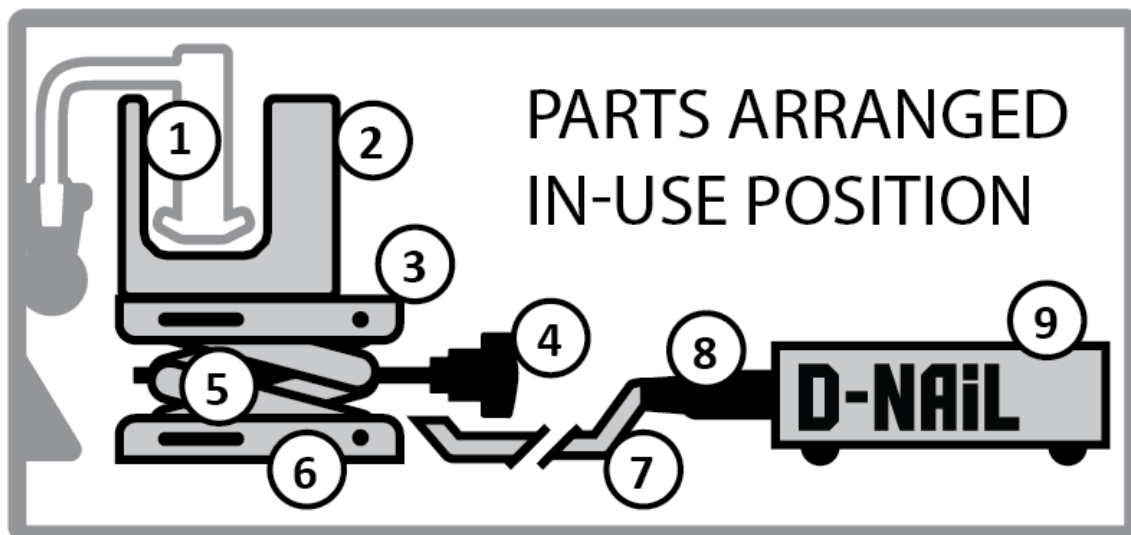


In-Use Position Adjustments:

Ideal position for heating is centered within Inner Crucible with no contact to any surfaces.


Contact causes uneven heating,
and/or heating in undesired area.

Heat is focused in the
middle of the Inner
Crucible.

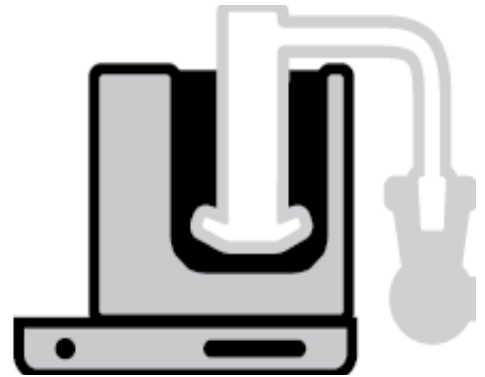

**It is not recommended to hang
any parts in crucible or along rim.**

Position correctly before heating.
While hot, make careful slow adjustments.

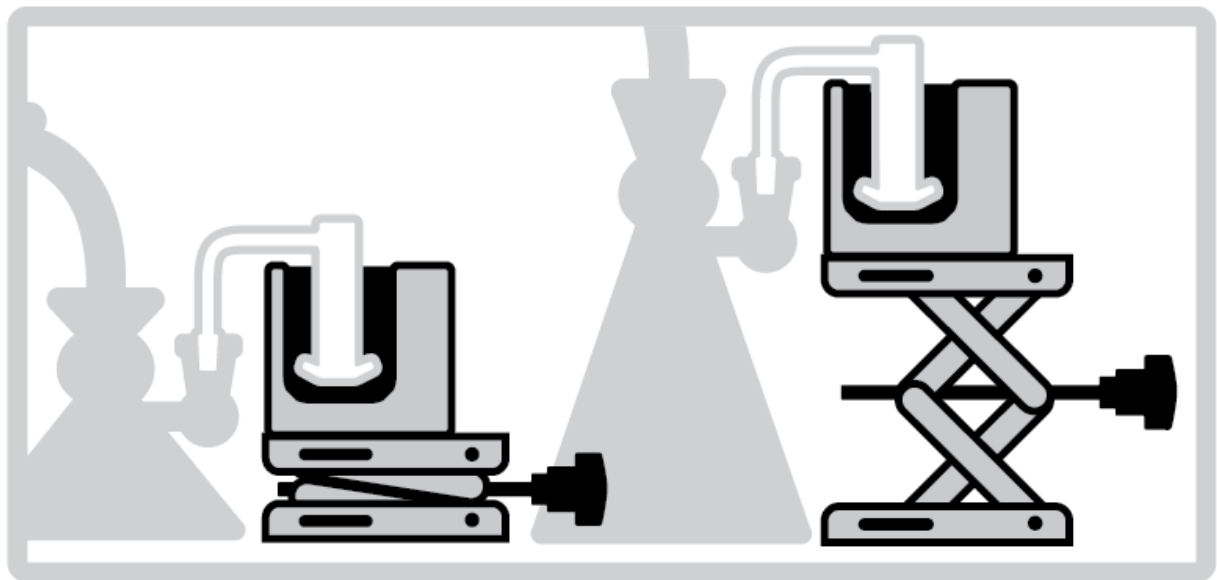

Adjust height of Scissor-Lift by turning the Height Knob:
turn LEFT LIFTS, turn RIGHT LOWERS

Caution: Inner Crucible, Heat Shield, Top Plate, all become very hot in-use, do not touch if heated!

Before Heating Steps:

1. Ensure tabletop is level and stable.
2. Check that Inner Crucible is clean.
Clean if needed, see 'cleaning instructions'
3. Arrange all parts into in-use position.
*Adjust height of Scissor-Lift if needed.
Ensure Heater Cord is placed securely.
Nothing should touch surface of
Inner Crucible or Heat Shield.*
4. Insert XLR Plug into D-Nail Controller.
5. Power switch of D-Nail Controller ON.
*Adjust temp settings as needed,
see 'Use Settings'*
6. Heater switch of D-Nail Controller ON.
*Burn off of surface residue is normal on heat up,
allow to complete before use.*

Caution: Never leave unattended while hot

When Finished:

Turn heater switch of D-Nail Controller *OFF*, leave power to Controller *ON* to observe temperature while cooling.